

**IMPORTANT SAFETY INSTRUCTIONS
READ ENTIRE MANUAL BEFORE INSTALLING SPA.
PLEASE SAVE THIS MANUAL.**

U100 SERIES OWNER'S MANUAL

**VITA INTERNATIONAL
2320 N.W. 147th Street Miami, Florida 33054**

h e a l t h a n d r e l a x a t i o n f o r l i f e

U100 SERIES OWNER'S MANUAL

OWNER'S RECORD

DATE PURCHASED: _____

DATE INSTALLED: _____

DEALER: _____

ADDRESS: _____

TELEPHONE: _____

SERIAL #: _____

MODEL #: _____

To contact our Technical Service Department, please write to:

VITA INTERNATIONAL
2320 NW 147th Street, Miami, FL 33054
or call: (305) 685-2063
Monday through Friday, 8:30 am to 5pm, EST.



TABLE OF CONTENTS

GENERAL INFORMATION

- Important Safety Instructions 2-3
- WARNINGS 3
- Manufacturer's Do's and Don'ts 3

SET UP AND INSTALLATION

- Site Selection/LOCAL CODES 4
- Electrical Requirements and Installation . . 4
- Clearances 5
- In-line Ground Fault Circuit Installation Diagrams . 6-8
- Cover installation 9

OPERATION INSTRUCTIONS

- Filling Your Spa 10
- Testing the GFCI 10
- Top Side Digital Control 10
- A. Displaying Time or Temperature 10
- B. Setting Temperature 10
- C. Setting Time and Filtration Hours 11
- D. Auto Heat Operation 11
- E. Jet Button 11
- F. Light Button 12
- G. Auxiliary Button 12
- I. Memory 12
- J. Resetting Your Spa 12
- **Jet Operation**
- A. Three Way Power Diverter Valve 13
- B. Turbo Massage Jet 13
- C. Air Control 13

- D. Directional and Rotational Massage Jets . . 14

- E. Mini Directional Massage Jet & Mini Rotational Jet . 14

SAFETY FEATURES

- A. Freeze Protection 15
- B. Flow Protection 15
- C. Overheat Protection 15

SPA MAINTENANCE

- Filter Maintenance 16
- Draining Your Spa 16
- Winterizing Your Spa 16
- Natural Redwood 16
- Cover Maintenance 16
- Care Of Acrylic Surface 17
- Spa Light Colored Lens Removal 17
- Spa Light Bulb Replacement 17
- Diverter Valve Cleaning 17

WATER QUALITY & MAINTENANCE

- Sanitizing 18
- pH Control 18
- Important Maintenance Procedures . . . 19
- Balancing Spa Water 20-22
- Water Maintenance Do's and Don'ts . . 23
- Water Troubleshooting 24-25

DIAGNOSTICS & TROUBLESHOOTING

- Diagnostic Messages 26

LIMITED REPLACEMENT WARRANTY. 27

MAINTENANCE LOG 28

Congratulations!

Thank you for the purchase of your new Vita Spa.

Your spa has been designed to be simple to own and operate. With a little care, it will give you many years of economical, trouble free use. This manual will guide you through the proper installation and maintenance of your spa. Please take sufficient time to familiarize yourself with it.

If you have any questions regarding your spa's set-up, operations, or maintenance, please contact your Authorized Dealer.

Consumer satisfaction is important to us. We welcome your comments and suggestions. Please share them with us via telephone, letter, or email at vita@vitaspa.com.

Sincerely,

Eric Dormoy,

President

DM Industries, Ltd.

CAUTION

When installing the spa indoors, use care to install in areas that can withstand exposure to water.

WARNING

Findings in the "Journal of the American Medical Association" show that women who are planning a pregnancy or are experiencing the first months of pregnancy should avoid hot tubs and saunas. Please consult your physician before using the spa if you are pregnant or think you may be. For further information, see page 2 and 3.

IMPORTANT SAFETY INSTRUCTIONS

WHEN INSTALLING AND USING THIS ELECTRICAL EQUIPMENT, BASIC SAFETY PRECAUTIONS SHOULD ALWAYS BE FOLLOWED, INCLUDING THE FOLLOWING:

1. READ AND FOLLOW ALL INSTRUCTIONS.

2. WARNING - To reduce the risk of injury.

Do not permit children to use this product unless they are closely supervised at all times.

3. DANGER - Risk of Accidental Drowning.

Extreme caution must be exercised to prevent unauthorized access by children. To avoid accidents, ensure that children cannot use this spa unless they are supervised at all times.

4. WARNING - Ground Fault Circuit Interrupter (GFCI) Protection.

All spas must be GFCI protected. If your spa is being permanently connected (hard wired) to a 110V or 220V circuit, the installation must be done in accordance with local and national electrical codes and must be performed by a licensed electrician. A GFCI must be installed in line.

If your spa will operate on 110V only, an optional GFCI protected cord available from your dealer can be used to connect the spa to a 110V 15A grounded outlet. If this outlet circuit also serves other appliances, it may cause the breaker in the main house panel to trip. If this occurs, you may need to upgrade your circuit to 20 Amps or to add a dedicated circuit. In either case, please consult your licensed electrician.

DANGER - Risk of Injury, spas with GFCI protected Cord. Replace damaged cord immediately. Do not bury the cord. Do connect the GFCI protected cord to a grounded, grounding type receptacle only.

WARNING - GFCI must be tested before each use. Prior to using the spa, push the test button. The unit should stop operating. Push the reset button and the unit should now operate normally. If the interrupter fails to operate in this manner, there is ground current flowing indicating the possibility of an electrical shock. Disconnect the spa until the fault has been identified and corrected.

- 5. DANGER - Risk of injury.** The filter in this spa is sized to match the specific water flow created by the pump. Should the need arise to replace the filter or the pump, be sure that the flow rates are compatible. Never operate the spa if the filter is broken or missing. Never replace a filter with one rated less than the flow rate on the original filter.

6. DANGER - Risk of Injury

Do not remove suction fittings. The suction fittings on this spa are sized to match the specific water flow created by the pump. Should the need arise to replace the suction fittings or the pump, be sure that the flow rates are compatible. Never operate the spa if the suction fittings are broken or missing. Never replace a suction fitting with one rated less than the flow rate marked on the original suction fitting.

7. DANGER - Risk of electrical shock:

A Ground terminal (pressure wire connector) is provided **on the control box inside the unit** to permit connection of a minimum No. 8 AWG (8.2mm²) solid copper bonding conductor between this point and any metal equipment, metal water pipe, metal enclosure of electrical equipment, or conduit within five feet (1.5m) of the unit.

- 8. DANGER - Risk of Electric Shock.** Install the spa at least 5 feet (1.5 m) from all metal surfaces. A spa may be installed within 5 feet of metal surfaces if each metal surface is permanently connected by a minimum No. 8 AWG (8.4) solid copper conductor to the wire connector on the control box which is provided for this purpose.

- 9. DANGER - Risk of Electric Shock.** Do not permit any electric appliance, such as a light, telephone, radio, or television, within 5 feet (1.5 m) of a spa.

10. WARNING - To reduce the risk of injury:

A. The water in a spa should never exceed 40° C (104° F). Water temperatures between 38° C (100° F) and 40° C (104° F) are considered safe for a healthy adult. Lower water temperatures are recommended for young children and when spa use exceeds 10 minutes.

B. Since excessive water temperatures have a high potential for causing fetal damage during the early months of pregnancy, pregnant or possibly pregnant women should limit spa water temperatures to 38° C (100° F).

C. Before entering a spa the user should measure the water temperature with an accurate thermometer since the tolerance of water temperature-regulating devices varies.

D. The use of alcohol, drugs, or medication before or during spa use may lead to unconsciousness with the possibility of drowning.

E. Persons suffering from obesity or with a medical history of heart disease, low or high blood pressure, circulatory system problems, or diabetes should consult a physician before using a spa.

F. Persons using medication should consult a physician before using a spa since some medication may induce drowsiness while other medication may affect heart rate, blood pressure, and circulation.

11. WARNING - Prolonged immersion in water that is warmer than normal body temperature can result in a dangerous condition known as: **HYPERTHERMIA**. The causes, symptoms, and effects of hyperthermia may be described as follows: Hyperthermia occurs when the internal temperature of the body reaches a level several degrees above the normal body temperature of 98.6 degrees F. The symptoms of hyperthermia include dizziness, fainting, drowsiness, lethargy, and an increase in the internal temperature of the body. The effects of hyperthermia include: **(1)** unawareness of impending hazard, **(2)** failure to perceive heat, **(3)** failure to recognize the need to exit the spa, **(4)** physical inability to exit the spa, **(5)** fetal damage in pregnant women, and **(6)** unconsciousness resulting in a danger of drowning.

12. WARNING

- The use of alcohol, drugs, or medication can greatly increase the risk of fatal hyperthermia in hot tubs and spas.
- Persons taking medications which induce drowsiness such as tranquilizers, antihistamines or anticoagulants should not use the spa.
- Pregnant women and persons with a medical history of heart disease, circulatory problems, diabetes or high blood pressure should consult their physician before using the spa.
- Children are especially sensitive to hot water.

At no time should children have unsupervised access to the spa. The use of elevated decking may encourage children to climb onto the thermal cover — **IT IS NOT DESIGNED AS A SAFETY OR CHILD RESISTANT COVER!** The Spa comes with a thermal cover which is provided with locking straps. **INSTALL** the locks for your child's safety.

MANUFACTURER'S DO'S AND DON'TS

Reading and understanding these warnings will allow you to reduce the risk of causing inadvertent damage to your spa, your surroundings, or yourself. Read these warnings carefully.

DO Make sure the spa is connected to a Ground Fault Circuit Interrupter (GFCI). Refer to "Ground Fault Circuit Interrupter Protection" on pages 2. Test the GFCI before each use.

DO Test the water with your hand before entering the spa to be sure it is comfortable.

DO Remember that wet surfaces can be slippery. Take care when entering and exiting the spa. Only enter by way of the step(s) in the spa. Do not step on edges or filter lids.

DO Keep the thermal cover on the spa when it is not in use, empty or full.

DO Maintain proper water pH (7.4-7.6) and clean filter cartridge weekly. Refer to Water Maintenance section.

DO Take steps to prevent the intrusion of sand and dirt into the spa.

DO Maintain water level to 1" above the highest jets. The jets can spray water out of the spa if the water level becomes too low.

DO Shut off circuit breaker to the spa before draining the spa, while it is empty and while filling it.

DO Place only on surfaces that can withstand the floor loading requirements of your tub. If you do not know the rating of your floor, consult an architect or engineer before filling.

DO Install the spa only on floors or areas that can withstand repeated exposure to water (tile, brick, etc.)

DO NOT Store chemicals in the spa's equipment compartment.

DO NOT Open the electrical control box. They are no user serviceable parts inside.

DO NOT Operate the spa without a GFCI located in line for permanently connected spas or at the end of the power cord on 110V units. The GFCI shuts off power in the event of an electrical short. Refer to "Ground Fault Circuit Interrupter Protection" on pages 2.

DO NOT Use an extension cord on 110V units to connect the spa to the power source. An extension cord will cause a voltage drop which may cause damage to the equipment.

WARNING: The use of alcohol, drugs, or medication can greatly increase the risk of fatal hyperthermia.

SAVE THESE INSTRUCTIONS



SET UP AND INSTALLATION INSTRUCTIONS

SITE SELECTION

Your spa is completely self-contained. It can be set up on a patio, deck, or indoor with special consideration. See diagram on page 5.

Structure: The spa should always be placed on a structurally strong, relatively smooth and level surface. Concrete, bricks, stepping stone or wood deck are acceptable permanent surfaces. The majority of the weight of the spa is placed under the foot well area of the spa. This area must be firmly supported at all times. Refer to specification section in the "Quick Reference Guide" provide with this manual for loading capacity.

Drainage: Drainage of water away from the spa electrical compartment should be allowed. Do not place the spa in an area where the water will "puddle" around it. A self draining surface sloped 1 inch per 10 feet would be ideal.

LOCAL CODES:

There may be certain restrictions and/ or requirements that are particular to your locality.

Delivery Passageway: Doors, halls, stairs, etc. may pose obstructions to deliver the spa. Choose its intended site accordingly.

Indoor installation

Please give special consideration to the following issues when installing your spa indoors.

1. Install your spa on water resistant, non-slip floor, preferably with a drain to remove the water that is splashed from the spa. Do not install on carpet or other material that will be damaged by moisture.
2. Take into consideration the room humidity which will exist due to high temperatures. Providing natural or forced ventilation in the room will help maintain comfort and minimize moisture damage to the surrounding environment.
3. Indoor second story above finished living space should be avoided due to the possibility of water and humidity damage.
4. Allow full access to the spa equipment for service.

Outdoor Installation

Please take into account the following when considering outdoor installation.

1. Local Building Codes.
2. Provide a smooth surface (tile, concrete, wood, brick or sand).
3. Place your spa away from areas where debris and dirt may be tracked into the spa.
4. Consider privacy and wind shielding. A sheltered environment can result in lower operating and maintenance costs.
5. It is recommended that the spa be placed in a location where it can be easily supervised when in use by children.

ELECTRICAL REQUIREMENTS AND INSTALLATION


110 VOLT MODELS

If your spa is provided with a GFCI protected power cord, allow access to the GFCI located at the end of the power cord. The 110 Volt outlet and GFCI plug should be protected from water intrusion from rain, sprinklers and accidental spills. Do not use an extension cord. Doing so will void the warranty.

The GFCI protected power cord can be plugged into a 110V 15A grounded outlet. If this outlet circuit also serves other appliances, it may cause the breaker in the main house panel to trip. If this occurs, you may need to upgrade your circuit to 20 Amps or to add a dedicated circuit. In either case, please consult your licensed electrician.

220 VOLT MODELS

All 220 Volt models must be permanently connected (hard wired) and GFCI protected in accordance with local and national electrical codes. All electrical wiring must be performed by a licensed electrician knowledgeable in the operation and wiring of a GFCI protected systems.

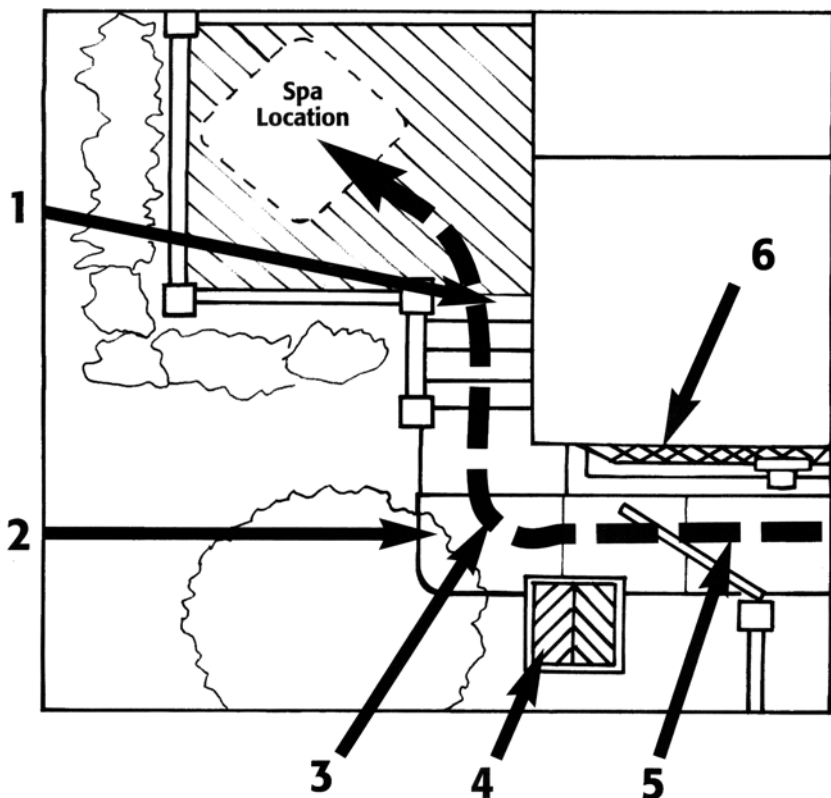

CLEARANCES

CHECK THE FOLLOWING AREAS PRIOR TO SPA DELIVERY

- 1. STEPS** - We suggest no more than six without a landing.
- 2. TREE BRANCHES** - Clearance for spa passage.
- 3. TIGHT CORNERS** - Make sure there is space to maneuver.
- 4. STORAGE SHEDS, DOG HOUSES, WOOD PILES** - Remove out of the way.
- 5. GATES: CLEARANCE FOR PASSAGE OF SPA** - Does gate need to be removed from hinges?
- 6. OVERHANGS AND GUTTERS** - Anything overhead, as well as drain pipe locations, must allow for spa passage.

1. The spa must be permanently connected (hard wired) to the power supply. No extension cords or plug-type connections are to be used in conjunction with the operation of the spa. Failure to supply power to the spa that is not in accordance with these instructions could create a potential health hazard and will void both the manufacturer's warranty and the independent testing agency listing.

2. **The National Electrical Code (NEC) requires that the power supply to this spa must be a dedicated, ground fault circuit (GFCI) protected circuit with no other appliances or lights sharing power on this circuit.**

3. Refer to the wiring diagram posted inside the electrical equipment door to determine the current, voltage, and wire size requirements for your spa.

4. THHN type wire is recommended. The wire size for the distance of the wire run must conform to NEC and local electrical codes.

5. To ensure proper connections use copper conductors only.

DO NOT USE ALUMINUM WIRE.

6. The spas' power terminal strip is located within the electrical control box.

7. **Feed supply conductors through power supply inlets provided on the spa and install into the control box. Modifications to the electrical equipment box are not permitted. Drilling holes in the electrical control box to provide access for wires in areas other than those provided for will void the manufacturer's warranty and the independent testing agency listing.**

8. Connect wires to terminal block (TBI) color for color. All wires must be connected or damage may result. **TIGHTEN SECURELY!**

9. A ground terminal (pressure wire connector) is provided on the control box inside the spa to permit connection of a minimum No. 8 AWG (8.4mm) solid copper bonding conductor between this point and any metal equipment, metal enclosures or electrical equipment, metal water pipe or conduit, within 5 feet (1.5m) of the unit as needed to comply with local requirements.

IN-LINE GROUND FAULT CIRCUIT INSTALLATION DIAGRAMS

All wires feeding the spa are to be the same gauge. Ground wires are to be insulated. When using a ground rod, the ground wire to the rod should be #6 bare copper wire.

All 220 Volt spas require the use of an isolated GFCI protected circuit. The installation of a disconnect is required no more than ten (10) visual feet from the spa and not less than five (5) feet from the spa. This requirement is to assure that the power cannot be inadvertently turned back on when the power is disconnected from the spa for any reason.


Wire your spa per the diagram most similar to your house panel.

220 Volts 3-wire systems:


Note: 220 volt spas use 3 wires: Ground, L1 and L2

110-220 Volt 4-wire convertible systems:


Note: 110/220 volt spas use 4 wires: Ground, L1, L2 and neutral when wired 220v. Only the heater operates.

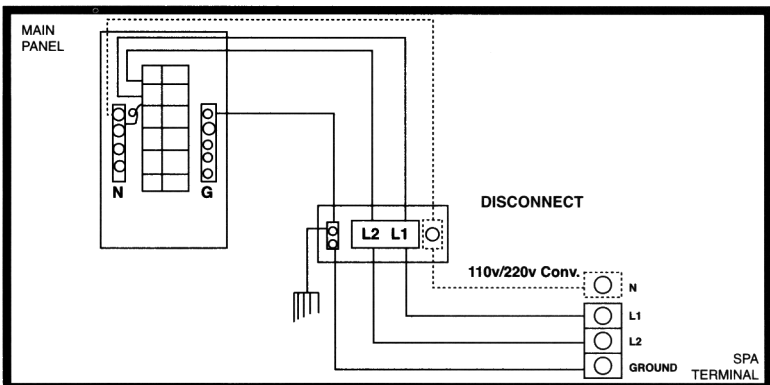


GFCI IN PANEL WITH SEPARATE NEUTRAL AND SOLID GROUND TO PANEL

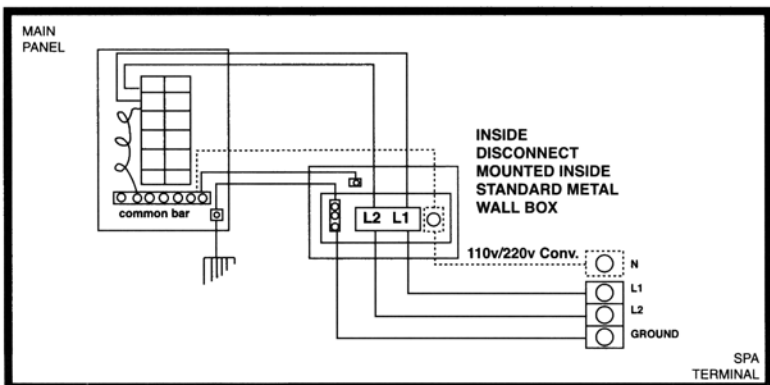


GFCI MOUNTED IN PANEL AND DISCONNECT MOUNTED INSIDE TO COMMON WALL WITH METAL STUDS OR WITH METAL MOUNTING BOX.

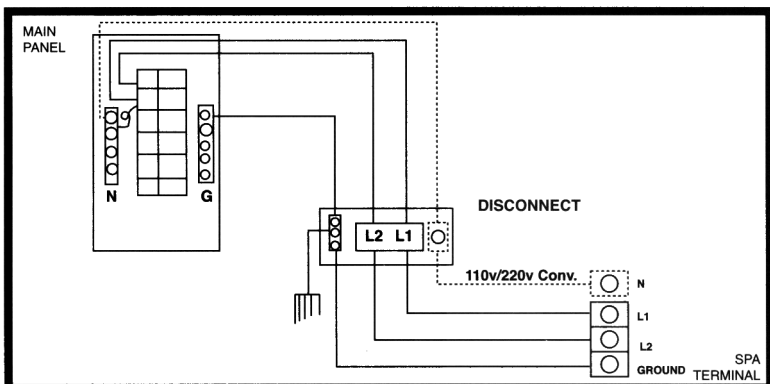


GFCI IN PANEL WITH WEAK GROUND OR ROMEX WITH UNDERSIZED GROUND WIRE USED TO FEED DISCONNECT

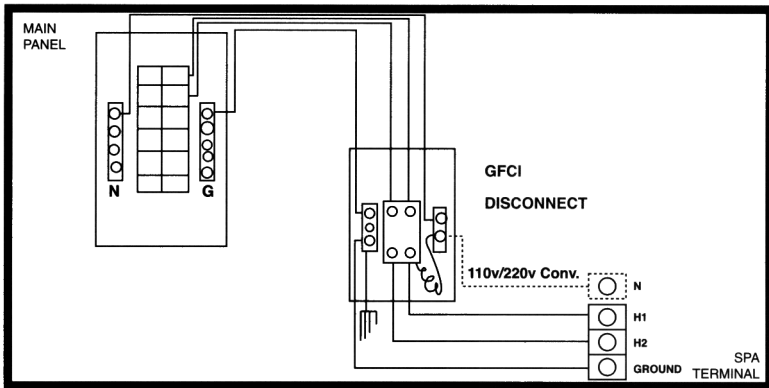

SEPARATE NEUTRAL & SOLID GROUND

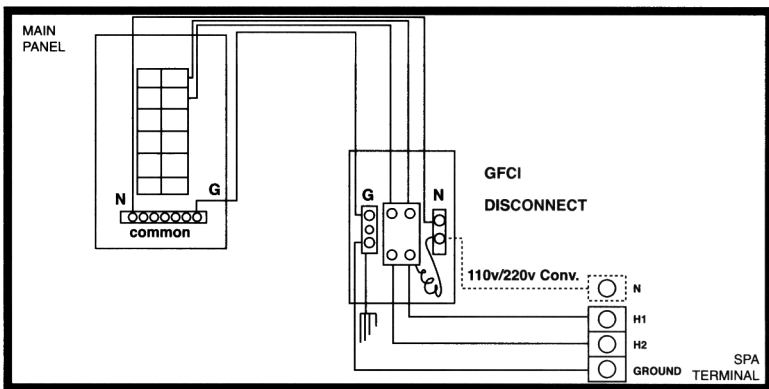


COMMON NEUTRAL GROUND BAR IN MAIN

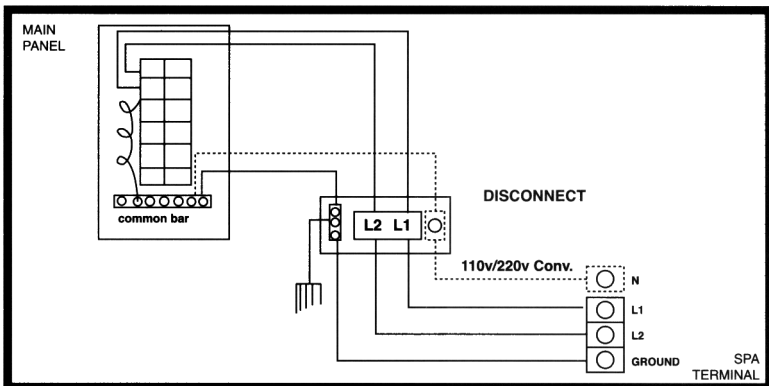

GFCI IN PANEL WITH COMMON NEUTRAL BAR AND/OR ROMEX WITH UNDERSIZED WIRE USED TO FEED DISCONNECT.

COVER INSTALLATION

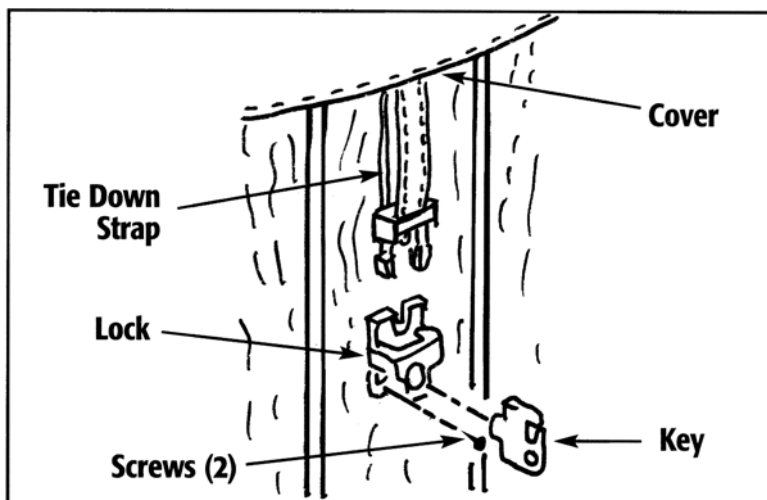

INSTALLING THE SPA COVER

1. Position the cover squarely over the spa.
2. Position the locks for the tie-downs on the sides of the spa. You should allow approximately 1/2" to 3/4" slack in the straps for ease of insertion into the locks and to allow for material shrinkage during temperature changes.
3. Using the screws provided, attach the locks and insert the cover tie-down straps. Utilizing the cover anytime the spa is not in use will reduce heat loss and thereby reduce the amount of running time required to make up that loss by the heating system.

Keep cover fastened down at all times when not in use.

DANGER - RISK OF INJURY

To reduce the risk of potential injury:

1. Never leave a spa uncovered or unattended.
2. Never leave a spa cover unlocked.
3. Do not stand, sit, or lie on the cover.

ALWAYS REMOVE SNOW FROM THE COVER. THE COVER HAS NOT BEEN DESIGNED TO SUSPEND THE WEIGHT OF WET SNOW.

OPERATING INSTRUCTIONS

NOTE: For best results, read each step carefully and entirely before proceeding to the next.

FILLING YOUR SPA

Do not turn on the power to the spa. Wipe the interior of the spa with a damp, soft cloth to remove any residue that may be on the surface. Fill with a garden hose by inserting the nozzle of the hose in the filter inlet. (After filling is complete, remember to put the filter cartridge in place prior to starting the spa.) As the spa is filling, check in the equipment access area for any leaks. On occasion, it may be necessary to hand tighten a union fitting that may have come loose during transit. Also check that the gate valves are pulled out to the open position and that the hose bib is closed. Continue to fill to the water line.

WATER LINE _____

TESTING THE GFCI

The GFCI is a very important safety device and the National Electric Code requires that all spas are GFCI protected.

The **GFCI** shuts off the electricity in a fraction of a second if there is a short anywhere in the system. It is recommended that the **GFCI** be tested prior to each use. Test as follows:

1. Push the TEST button on the **GFCI**. The RESET button will trip out, the top side digital control LED display will go out. If this does not happen, **DO NOT USE SPA. CALL YOUR DEALER FOR ASSISTANCE.**
2. If the **GFCI** tests properly, firmly push the RESET button back into place. The top side digital control LED display will come back on. If this does not happen, **DO NOT USE SPA. CALL YOUR DEALER FOR ASSISTANCE.**

3. If the **GFCI** trips by itself at any time, firmly press the RESET button back into place and perform the above tests. If this happens more than once, **DO NOT USE SPA. CALL YOUR DEALER FOR ASSISTANCE.**

TOP SIDE DIGITAL CONTROL TOP SIDE CONTROL L-50



Your spa has been designed to be simple to operate and maintain. It is equipped with state-of-the-art digital control with LED readout to show temperature and time. The digital control has been factory programmed for your convenience. Once properly connected, press the jet button to activate the low speed of the pump. The heater will come on and heat the spa. Default factory-programmed temperature, time and filtration hours are 102°F, 12pm and 4 hours (F=4H) respectively. Those initial settings can be changed by following the instructions shown below.

A. Displaying Time or Water Temperature.

Pressing the "PROG" button will allow switching the display between time and water temperature.

B. Setting Temperature

1. Press the "PROG" button to display water temperature.
2. Press the "UP" or "DOWN" arrow to select the desired temperature.

3. Press the "PROG" button to exit the programming mode.

C. Setting Time and Filtration Hours

1. Press and hold the "PROG" button for 5 seconds until the displayed hour starts flashing.
2. Press the "UP" or "DOWN" arrow to select the current hour.
3. Press the "PROG" button one more time to display the minutes.
4. Press the "UP" or "DOWN" arrow to select the current minutes.
5. Press the "PROG" button one more time to display the filtration hours. F=4H (default) will be flashing. Refer to "Filtration Cycles" section to determine the lengths of cycles (F=4H or F=8H) you prefer.
6. Press the "UP" or "DOWN" arrow to select the filtration cycle desired.
7. Press the "PROG" button to exit the programming mode.

D. Auto Heat Operation

Your spa is equipped with a 2-speed pump. The low speed operates during filtration and heating cycles. Your selected water temperature will be maintained automatically 24 hours a day. The electronic thermostat will monitor your water temperature at the top of each hour by cycling the low speed pump for 2 minutes. If the spa water temperature is below the set temperature, the heater will be activated until the water temperature reaches the set temperature, at which point both low speed pump and heater will turn off. If the water temperature is at the set temperature, the low speed pump will turn off at the end of the 2 minutes. The spa water will heat about 1 to 3 degrees F per hour for 110 Volt system and 3 to 5 degrees F for 220 Volt systems. The maximum temperature is set at 104 F.

The pump hi-speed therapy mode can be activated during those cycles. The heater will stay on if needed to bring up the water temperature. Note that for 110 Volt spas, the heater will turn off when you turn on the Hi-speed therapy pump mode.

E. JET Button



Your spa is equipped with one or two therapy pumps that can be activated as follows:

Single Pump Systems:

1. Press "JET" to activate the Relaxation Therapy mode. (Low speed pump).
2. Press "JET" a second time to activate the Power Therapy mode. (High speed pump).
3. Press "JET" button a third time to turn the pump off. Note that the low speed pump will remain on if the water temperature is below the set temperature or if it is during filtration hours.

Note that for safety, Jet Power Therapy mode will turn off after 30 minutes. Reactivate as needed.

Dual Pump Systems:

1. Press "JET" to activate the Relaxation Therapy mode. (Low speed pump)
2. Press "JET" to activate pump #1 Power Therapy mode. (High speed pump #1)
3. Press "JET" to activate pump #2 Power Therapy mode. (High speed pump #2)
4. Press "JET" to de-activate pump #1.
5. Press "JET" to de-activate pump #2.

Note that the low speed pump will remain on if the water temperature is below the set temperature or if it is during filtration hours. For safety purposes, Jet Power Therapy Mode will turn off after 30 minutes. Reactivate as needed.

**ALWAYS CHECK THE WATER TEMPERATURE
PRIOR TO ENTERING INTO YOUR SPA.**

OPERATING INSTRUCTIONS

F. LIGHT Button



Turns the spa light ON and OFF. If left ON, the light will automatically go OFF after 9 hours.

G. Auxiliary Button

This button is not operational on U100 series spas.

H. Filtration Hours

Your spa digital control has an electronic timer that has been pre-programmed to automatically run the filtration low speed pump 2 hours twice a day for a total of 4 hours (F=4H), from 8am to 10am and from 4pm to 6pm. You have the option of increasing the filtration time to 8 hours per day (F=8H, from 6am to 10am and from 6pm to 10pm) depending on user load and on the type of sanitizing system you use. For instance, proper use of an ozonator requires 8 hours a day. To change your filtration time to 8 hours, please refer to section "B. Setting Time and Filtration Hours".

The heater will come on as needed during filtration hours to maintain the water temperature. Note that filtration will also be provided during the heating cycles when the electronic thermostat monitor water temperature at the top of each hour and maintain the low speed pump when additional heat is needed.

I. Memory

The temperature setting that is entered into your spa digital topside control are permanently retained in its solid state memory. In the event of a power failure, the temperature and time settings will be captured and held until power returns. The temperature setting at the time of the power failure will be restored when power returns. You will have to reset the time to actual.

J. Resetting Your Spa

Like your PC at home, your spa electronics could get corrupted by electrical surges or spikes, or by low voltage, resulting in improper operations. Anytime there is reason to believe that your spa system is not operating properly, please follow the following resetting procedure:

1. Turn the power to the spa off for 5 full minutes.
2. Turn the power back on.
3. Press "PROG" to show time.
4. Press and hold the "UP" arrow for 5 seconds. The top side display will show 12:00 PM as soon as you release the "UP" arrow indicating a successful reset. The set temperature and filtration hours will be reset to their factory pre-programmed settings of 102F and 4HR respectfully.


JET OPERATION

Your spa is designed with a unique jet system to allow you to select a wide variety of massage patterns. The following is a description of the various types of jets and their operation you may use to tailor your spa to your specific massage needs.



A) THREE WAY POWER DIVERTER VALVE

The Power Diverter Valve allows water to be diverted to a zone of jets or the Turbo jet exclusively, or to both combined. Turning the diverter to the right or the left will divert all the water to a bank of jets or the Turbo jet for maximum output. When left in the center, water will be flowing through both. For flow diagram, please refer to your spa " Quick Reference Guide" provided with this manual.

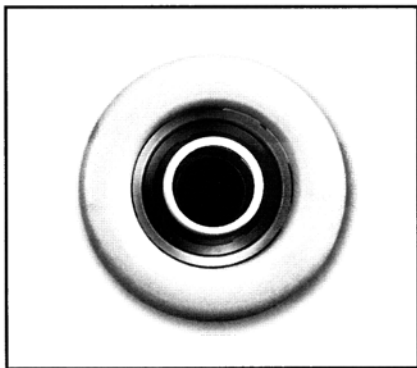


B) TURBO MASSAGE JET

The Turbo massage therapy is great for working out those hard-to-relieve muscle knots and to create swirling whirlpool effect in the spa. The Turbo Massage jet pressure can be adjusted by rotating the Power Diverter Valve, or by adjusting Air Control towards the center.




C) AIR CONTROL

The Air Controls are used to introduce air into the water jet stream. They allow the user to increase (open) jet pressure or decrease (close) jet pressure as desired.

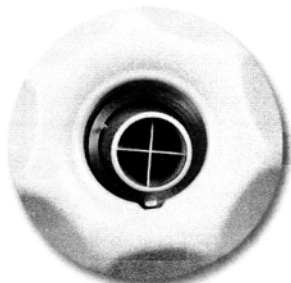

Directional Quad Stream Jet

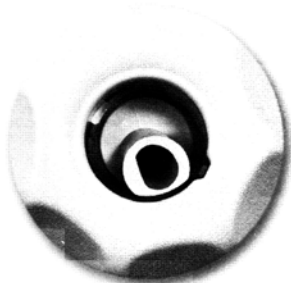

Rotational Swirl Jet


D) DIRECTIONAL AND ROTATIONAL MASSAGE JETS

When the pump is on and the 3-way diverter valve is directed to the bank of jets, the Directional Quad jets and Rotational Therapy jets will be operational. The nozzle of the Directional Quad jets can be adjusted to direct the flow to specific parts of your body. The Rotational jets provide a "swirling" type therapy. The water pressure can be adjusted in both jets by rotating the outer rim of the jet clockwise for minimum pressure and counter clockwise for maximum pressure. Water pressure can also be varied by opening or closing the air control.

For cleaning purposes, these jet faces can be removed by depressing locking tab and pulling away from jet body. Re-install it by pushing the face back in place.



Mini Directional Massage Jet

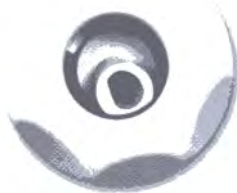

Mini Rotational Jet

E) MINI DIRECTIONAL MASSAGE JET AND MINI ROTATIONAL JET.

These jets are used for back, neck and shoulder massage. They deliver a firm pinpoint jet stream of massaging action that are directed to specific areas of the neck or shoulders. They can be pressure controlled by rotating the jet face or by opening and closing the air control valves.

For cleaning purposes, these jet faces can be removed by grabbing outer face and pulling away from jet body. Re-install it by pushing the face back in place.

SAFETY FEATURES

A. Freeze Protection

If the temperature in the spa plumbing falls below 50 degrees Fahrenheit (10 degrees celsius), the water pump will turn on low speed and run for 30 seconds. After 30 seconds, if the water is still at 50 F, the heater will turn on and raise the temperature 10 Degrees. The top side control will display the message "ICE" to indicate potential freeze conditions.

B. Flow Protection

If the flow of water through the heater is insufficient, the spa controller will automatically turn off the heater to prevent overheating. The display will show "FLO", indicating a flow restriction caused by a clogged filter or pump impeller, a malfunction of the pressure switch or a defective pump motor. Refer to the Trouble Shooting Chart. If you cannot pinpoint the cause, Call Your Dealer for technical assistance.

C. Overheat Protection.

If a malfunction occurs and the spa water temperature reaches 112F, the pump and heater will turn off. **DO NOT ENTER THE WATER.** Remove the cover and allow the water temperature to cool down to 104 F. Reset the system by holding the "UP" arrow for 5 seconds. See "Resetting Your Spa" page 12. The pump and heater will start normal operation. If this happens a second time in a row, **TURN THE POWER TO THE SPA OFF AND CALL YOUR DEALER FOR ASSISTANCE.**

If there is an overheat condition in the spa heater, the display will show the message "HILI". **DO NOT ENTER THE WATER.** Remove the cover and allow the water to cool down to 104F. Then reset the system by holding down the "UP" button for 5 seconds. See "Resetting Your Spa" page 12. If the "HILI" message returns, **TURN THE POWER TO THE SPA OFF AND CALL YOUR DEALER FOR ASSISTANCE.**

Your spa is manufactured with the highest quality and most durable materials available. A spa care and maintenance program is recommended to increase your comfort, maintain the spa's reliability, and protect your investment.

FILTER MAINTENANCE

Your Spa is designed with the most efficient top loading filtration system in the industry. Filter maintenance is the most critical factor in keeping your spa water clean.

TO CLEAN THE FILTER

(NOTE: Never run the spa without a filter installed) Remove the skimmer basket and the cartridge. Spray it with a garden hose. It will be necessary to rotate the cartridge while spraying so as to thoroughly remove the debris lodged between the filter pleats.

After allowing to dry, inspect the cartridge for calcium deposit (scaling) or an oil film. Rapid mineral build-up from hard water, or oil build-up from the use of oil-based water scent or body oil may coat the filter cartridge. A filter cleaner to soak the cartridge is available from your local Spa dealer and should be used as part of your spa maintenance. Use a rag to remove any debris at the bottom of the filter housing. Replace the cartridge in the filter housing. We recommend the use of a spare filter. This way one can be soaking and cleaning while you continue to enjoy the use of your spa.

DRAINING YOUR SPA

Detergent residues from bathing suits as well as soap film from your body may gradually accumulate in the water. Foam inhibitors will suppress the foam but will not remove the soap from the water. Eventually, the soap build-up in the water will concentrate enough to leave an unclear feeling on the user's skin, causing sudsing and make the water impossible to clarify. Depending on the amount of soap input, the spa water should last between two and three months.

TO DRAIN YOUR SPA

Turn the power off at the GFCI breaker. Attach a garden hose to the bib located in the equipment department of the spa. Position the garden hose in your desired draining area.

Careful not to drain into flowers or plants. The spa will empty by gravity. Siphon or scoop out the balance of the water.

IMPORTANT: Spa water with a high sanitizer level may harm plants and grass. If you are draining your spa for the winter, be sure to fully drain water from the pipe by disconnecting the two unions at the gate valves found by each pump. Drain the water from the pump by removing the pump plug. Then reinstall the pump plugs. Remove the filter and clean as required. Inspect the spa shell and clean as required.

Refill the spa BEFORE restoring power to it.

WINTERIZING YOUR SPA

Your spa has been designed and engineered for year-round use in any climate. If the spa will not be used, drain it completely, following the instructions on "DRAINING THE SPA." If you intend to use the spa during the winter, keep the spa covered to prevent heat loss.

NATURAL REDWOOD

Although your spa came stained from the factory, exposure to wind, rain and sun will cause the wood to weather. Much like any piece of furniture, if your spa came with natural redwood, you will be required to preserve it from time to time (suggested minimum of two times per year). Your Vita Spa is treated with a specially formulated "water-based" stain and sealer. This sealer can be obtained through your local Spa dealer. DO NOT USE URETHANE OR POLYESTER COATINGS. That will prevent the wood from its need for natural moisturizing.

COVER MAINTENANCE

Your cover is manufactured from a durable marine grade, UV resistant material. Even so, monthly cleaning and periodic conditioning is recommended to maintain its beauty. To clean and condition the vinyl cover: Lightly spray the

cover with a garden hose to rinse it and remove the debris. Using a large sponge or soft cloth and a mild soap solution (1 teaspoon dish washing liquid with 2 gallons of water), scrub lightly in circular motion. Then rinse it thoroughly with plenty of water. Condition the vinyl after cleaning by applying a thin film of vinyl conditioner. NOTE: To remove tree saps, use lighter fluid (not charcoal lighter but the kind used in cigarette lighters). Use sparingly and rinse with mild soap solution afterwards. Wipe dry.


CARE OF ACRYLIC SURFACE

To maintain the surface of your spa, simply clean with a soft damp cloth (a mild detergent is okay) or with any glass cleaner. DO NOT clean the surface with any type of abrasive as it will dull the surface and natural luster of the acrylic. DO NOT use any type of oil based solvent. Such products can be very harmful to the surface of the spa and will void the surface warranty of the spa.

SPA LIGHT COLORED LENS REMOVAL

In your owners packet you will find colored lenses for your spa light. They can easily be installed or removed by placing them over the spa light and gently pushing on the outer edges to install and pulling along the edges to remove.

LIGHT BULB REPLACEMENT

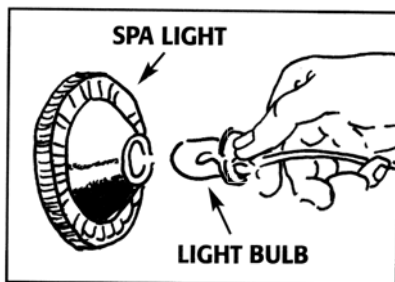

1. Turn off the power to the spa.
2. Remove the front panel of the spa.
3. Locate the spa light.
4. Turn the bulb counter - clockwise 1/4 turn to remove from its socket
5. The replacement bulb is locked into place by turning it clockwise 1/4 turn.
6. Close up the cabinet and turn the power back on.
7. Check the Top Side display and adjust the time.

DIVERTER VALVE

Over a period of time sand or grit may intrude into your spa. The diverter valves may become difficult to turn. It is important that the debris be removed as soon as possible to avoid damage to the valve.

1. Turn off the power to the spa.
2. Remove the diverter handle by pulling upward and gently rocking it.
3. Grasp the collar and turn it counter-clockwise.
4. Lift the valve body up.
5. Wipe the valve body and interior walls of the valve with a soft cloth.
6. Inspect the valve and valve walls for any grooves caused by the debris.
7. Using a fine grit sandpaper, smooth down any deep furrows.
8. Wipe the valve and wall down with a damp cloth and remove any debris left behind.
9. Lubricate the valve body with a waterproof lubricant.
10. Reassemble the valve and restore the power to the spa.
11. Check the Top Side display and adjust for time.

WATER QUALITY AND MAINTENANCE

GENERAL GUIDELINES FOR WATER QUALITY MAINTENANCE

Maintaining water quality within specific limits will enhance your enjoyment and prolong the life of the spa. Safe, comfortable and clean spa water is a fairly simple task to achieve, but it does require attention because of the numerous factors that can alter it. There is no one formula to be followed because of the variables, i.e. quality of the water used to fill the spa, water temperature, user load, etc. For specific guidelines for water quality maintenance, consult your local Spa dealer who can assist you to develop a program based on your specific needs. Disregard for water maintenance will result in poor soaking conditions, damage your spa investment, and possibly void your warranty.

SPA WATER MAINTENANCE CONSISTS OF THREE SEPARATE, EASILY DEVELOPED PROGRAMS:

Sanitizing and maintaining a safe level of sanitizer in the spa water. Balancing the pH and maintaining the recommended mineral content level. Achieving and maintaining water clarity.

SANITIZING

To destroy bacteria and organic compounds in the spa water, a sanitizer must be used regularly. The use of ozone as an oxidizer has proven to be an effective method to help maintain water cleanliness, but a residual chemical sanitizer such as bromine, the most common sanitizer used in spas, must be used in conjunction with ozone. Do not drop bromine tablets directly in the spa. The use of a floater is required to dispense safely and properly the right amount of bromine in the spa water. A bromine residual of 2 to 3 PPM is generally considered desirable. A two-part bromine system or granular chlorine (Dichlor) are also acceptable sanitizers.

pH CONTROL

pH is a measure of acidity and alkalinity of the spa water. The recommended pH for spa water is 7.4 to 7.6 PPM. Below 7.0 (considered neutral), the spa water is acidic and can cause damage to the heating system. Above 7.8 the water is too alkaline and can result in cloudy water and scale formation on the spa shell, heater and cover.

IMPORTANT: NEVER USE CHLORINE TABLETS (TRICHLOR) IN YOUR SPA.

This chemical can have an extremely corrosive effect on certain materials in the spa. Also, the use of liquids, chlorine or acid, are not recommended. Damage caused by use of any chemical, is not covered under the spa warranty.

IMPORTANT WATER MAINTENANCE PROCEDURES

DAILY

3 days a week

Check water level. Keep water above bottom of skimmer door and a minimum of 1" above highest jet.

Check and adjust chlorine level to 1.0 to 3.0 ppm if chlorine is used as sanitizer. If bromine is used, check weekly. If Sparkle Clear is used, check weekly.

WEEKLY

Test the spa water using 3-way water test strips

Adjust pH and total alkalinity. pH: 7.4 to 7.6 (ideal 7.6).

Total Alkalinity: 80 to 120 ppm

Maintain 1.0 to 3.0 ppm bromine or free chlorine.

Add 1 ounce of additive, such as "Spa Defender," to prevent calcium build-up.

Calcium hardness: 120 to 250 ppm.

Spray filter element to remove loose particles.

MONTHLY

Four to six weeks

Inspect and clean the spa filter cartridge. It is important to maintain your spa filter cartridge and keep it clean and free of particles which can restrict water flow. If the filter is not cleaned on a regular basis, the filter may clog and restrict water flow, which causes improper filtration and poor jet performance. See "Filter Cleaning" instructions.

Two to three months

Drain your spa. Follow the procedures outlined in "Draining Your Spa" and clean it following the procedures on page 16. When refilling your spa, be sure to follow the procedures outlined in "Balancing Your Spa Water" on the next page.

WATER MAINTENANCE

BALANCING THE SPA WATER

Water treatment is an important factor in the enjoyment of your spa. Proper water sanitation is essential to your health as well as permitting years of trouble-free use of your spa. The most common water chemistry problems that can damage your spa are:

1. Improper pH maintenance. pH balance is critical to proper water maintenance. Too low of a pH level will result in corrosion of the spa's components.
2. Not pre-dissolving chemicals before adding to the water.
3. Use of improper chemicals.
4. Over chlorinization. Sodium dichlor is the recommended type of sanitizer. Sodium dichlor dissolves easily and has a neutral pH, which minimizes the effect that the addition of a sanitizer has on a pH balance. Trichlor compounds are not recommended because they have a very low pH, and are very potent and difficult to dissolve.

BALANCING YOUR SPA WATER


The instructions below will assist you with balancing the spa water for the first time. You will need the following items to balance your spa water.

1. "3-WAY TEST STRIPS"
2. "PH-UP" and "PH-DOWN" for pH control.
3. "MINERAL SURFACE PROTECTOR" for Calcium and Scale control.
4. "METAL INHIBITOR" for breakdown of mineral deposits.
5. "POTASSIUM PEROXY MONOSULFATE" for shock treatment.
6. "BROMINE" or "CHLORINE" for sanitizing the spa water.

BALANCING THE SPA WATER

Please read "WATER MAINTENANCE" then follow these easy steps:

1. Fill your spa until the water level is 1 inch above the highest jet. It is NOT advisable to use softened water in your spa, as may become corrosive.
2. Add a 1/2 pint of Spa Metal Inhibitor to prevent iron or copper deposits from staining the finish of your spa. If your water is known to contain high concentrations of these metals it may be necessary to add an additional quantity of Spa Metal Inhibitor.
3. Use a 3-Way Spa Water Test Strip or test kit to measure the pH and Alkalinity of your water. The following instructions utilize test strips for testing. Immerse the test strip in the spa water, following the instructions on the test strip container label. Compare the strip to the label to determine the condition of the spa water.

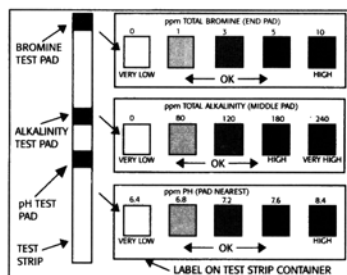

4. If the Alkalinity is not within the acceptable range (80 to 120 ppm) it should be adjusted first. If it is low, raise the alkalinity by adding PH-UP 1 oz. at a time, retesting until the alkalinity reaches 120 ppm. If the alkalinity is high, it should be lowered by using PH-DOWN 1oz. at a time.
5. After the alkalinity is properly adjusted, the pH is next. If the pH is above 7.8, use PH-DOWN (1 oz. at a time) to lower it to the acceptable range. It is extremely important to NEVER allow the pH of your spa water to be under 7.0, as this can severely damage your equipment and will void the warranty.
6. Add Sanitizer, either chlorine or bromine. For Chlorine: Follow the directions on the bottle. Chlorine dissolves rapidly; you should get a reading on the test strip within minutes of application. For Bromine: Follow the directions on your floating brominator. It is necessary to add sodium bromine only when the spa is being filled. Bromine tablets erode slowly, and it may take several hours before you will get a reading on the test strip. It may be necessary to adjust the floating brominator.
7. To properly maintain the chemical balance of your spa, follow the 3 day a week program outlined on page 19.

BALANCING THE SPA WATER

3 DAY A WEEK SPA CARE PROGRAM

MONDAY

1. TEST THE WATER USING "3-WAY SPA WATER TEST STRIPS".
2. Adjust pH and total alkalinity - Refer to pH and total alkalinity on label of "PH-UP" and "PH-DOWN".
3. Maintain 1.0 to 3.0 ppm Bromine or free Chlorine.
4. Add 1 ounce of "METAL SURFACE PROTECTOR" to prevent calcium build up.
5. Shock treat with 2 ounces of "POTASSIUM PEROXY MONOSULFATE", a nonchlorine shock, every week as needed.

WEDNESDAY

1. Nothing required if Bromine is used as sanitizer. Check and adjust Chlorine level if Chlorine is used.

FRIDAY

1. Nothing required if Bromine is used as sanitizer. Check and adjust Chlorine level if Chlorine is used.

NOTE: The above table is an example only. Actual spa usage will determine the amount of chemicals required to maintain proper chemical balance.

ALKALINITY

VERY LOW	0	ADD SODIUM BICARBONATE TO INCREASE
	80	
ACCEPTABLE ZONE		IDEAL
	120	
HIGH	180	ADD SODIUM BISULFATE TO DECREASE
VERY HIGH	240	

pH LEVEL

TOO ALKALINE	8.4	ADD pH DECREASER TO LOWER pH
	8.2	
SCALING ZONE	7.8	
	7.6	
COMFORT ZONE	7.4	IDEAL
	7.2	
	7.0	
TOO ACIDIC	6.8	ADD pH INCREASER TO RAISE pH
CORROSIVE ZONE		

SANITIZER LEVEL

ppm	DO NOT USE SPA UNTIL TEST KIT READING IS BELOW 5.0 ppm
5.0-	
4.0-	RECOMMENDED LEVEL
3.0-	SAFE
2.0-	
1.0-	DO NOT USE SPA
0-	ADD SANITIZER TO REACH RECOMMENDED LEVEL

WATER MAINTENANCE DO'S AND DON'TS

DO Add all chemicals slowly with the hydro jets operating in high speed.

DO Use care when handling chemicals.

DO Store granulated chlorine in a cool, dry place to maintain the chlorine's freshness. Granulated chlorine will degrade if stored improperly or for a long period of time. Do not store in sunlight.

DO Maintain total alkalinity level within the recommended range of 80 to 120 ppm. The calcium hardness level should be maintained in the 120 to 250 ppm range.

DO Maintain the pH level within the recommended range of 7.4 to 7.6.

DO Maintain proper chemical balance to reduce the risk of catching or spreading infection.

DO Use granulated chlorine/bromine produced specifically for portable spas.

DO NOT Use swimming pool chemicals in your spa.

DO NOT Use household bleach (liquid sodium hypochlorine).

DO NOT Use swimming pool (muriatic) acid to lower pH. Many swimming pool water care products can cause damage to spa and equipment.

DO NOT Allow anyone to be in the spa while chemicals are being added or dissolving.

DO NOT Use incorrect products such as Trichlor, which has a very low pH (2.6), dissolves very slowly, is highly concentrated, and was designed for concrete or plaster swimming pools. It will cause damage to your spa!

CHEMICAL SAFETY INSTRUCTIONS

When using chemicals, read labels carefully and follow directions precisely. Though chemicals protect you and your spa when used correctly, they may be hazardous in a concentrated form. Observe these guidelines:

DO Accurately measure and use the exact quantities specified, never more.

DO Handle all containers with care. Store in a cool, dry, well ventilated place.

DO Keep chemical containers closed at all times when not in use. Replace caps on proper containers.

DO Allow only a responsible person to handle spa chemicals. Keep them out of the reach of children.

DO Follow the emergency advice on the product label in case of accidental contact, or if the chemical is swallowed. Call a doctor or local Poison Control Center. If a doctor is needed, take the product container along so that the substance can be identified.

DO NOT Inhale fumes or let chemicals come in contact with your eyes, nose or mouth. Wash your hands after use.

DO NOT Let chemicals get on surrounding surfaces or landscaping. Don't use a vacuum cleaner to clean up chemical spills.

DO NOT Smoke around chemicals. Fumes may be highly flammable.

SPA WATER TROUBLESHOOTING

SYMPTOM	PROBABLE CAUSE	SOLUTIONS
Cloudy Water	Inadequate filtration/dirty filter	Clean filter with a filter cleaner or degreaser.
	Excessive oils/organic matter	Shock the spa with "POTASSIUM PEROXY MONOSULFATE".
	Improper sanitation	Increase sanitizer to recommended level.
	High pH and/or high alkalinity	Adjust pH; add "PH-DOWN".
	Suspended particles/organic matter	Use clarifier
	Overused or old water	Drain the spa, clean and refill.
Water Odor	Excessive Organics. Too many chloramines bromamines - insufficient free available chlorine	Shock the spa with "POTASSIUM PEROXY MONOSULFATE".
	Improper sanitation	Increase sanitizer level to recommended level.
	Low pH	Raise pH with "PH-UP".
Chlorine Odor	Too many chloramines-insufficient free available chlorine	Shock the spa with "POTASSIUM PEROXY MONOSULFATE".
	Low pH	Adjust pH; raise pH with "PH-UP"
Musty Odor	Bacterial or algae growth	Shock the spa. If problem is visible, draining and cleaning may be required.
Foaming	Buildup of body oils, lotion and chemicals resulting in soap or detergent	Add defoamer, or drain and refill.
	Overused or old water	Drain and refill.
	Excessive organics	Shock with "POTASSIUM PEROXY MONOSULFATE".
Organic Buildup/ Scum Ring Around The Tub	Body oils and dirt	Wipe off scum with a clean rag or use mild detergent. If needed, drain, refill spa, and adjust water.
	Inadequate filtration	Clean filter with a filter cleaner or degreaser.
Algae	High pH	Shock with "POTASSIUM PEROXY MONOSULFATE", adjust pH.
	Low free chlorine/bromine	Shock with "POTASSIUM PEROXY MONOSULFATE", maintain sanitizer at recommended level.

SPA WATER TROUBLESHOOTING

SYMPTOM	PROBABLE CAUSE	SOLUTIONS
Eye Irritation	Low pH	Raise pH with "PH-UP".
	Insufficient free available chlorine/bromine	Shock with "POTASSIUM PEROXY MONOSULFATE."
Skin Irritation/Rash	Unsanitary/polluted water.	Maintain recommended sanitizer residual at all times; super-chlorinate.
	Chlorine/bromine level too high (above 5ppm FAC).	Allow chlorine/bromine level to drop below 5 ppm before using spa.
Stains	pH or total alkalinity too low.	Adjust pH and total alkalinity; use sequestering agent; drain and clean with appropriate product.
Scale	High iron or copper in water source.	Use sequestering agent for metals; adjust water
	Too much calcium dissolved in water pH	Adjust total alkalinity and pH levels by adding the appropriate sodium bisulfate product; with concentrated scale deposits, drain the spa, clean the liner (as outlined in Liner Clean Up), refill the spa and balance the water.

DIAGNOSTIC & TROUBLESHOOTING

Resetting Your Spa

Like your PC at home, your spa electronics could get corrupted by electrical surges and operate improperly. If your spa system is not operating properly or shows any of the following messages, please reset it before calling for service to see if the malfunction disappears.

Turn power off for 5 full minutes –then– Turn power back on –then– Press "PROG" to show time –then– Hold "UP" for 5 seconds. Display will show 12:00 PM, indicating a successful reset (reboot).

SYMPTOM	MEANING	ACTION
Spa Inoperative	Power failure outside of spa.	Check power source Breaker and GFCI; Reset breaker/GFCI. Call Electrician if it will not start.

MESSAGE

FLO	Lack of water flow through Heater.	Remove filter and check for debris in filter and filter adapter. If "FLO" remains check for closed gate valves or see priming the pump.
-----	------------------------------------	---

HILI	a. Overheating detected in spa water. Spa pumps and heater will turn off at 112F for overheat protection. HILI message is not displayed. DO NOT ENTER THE WATER.	See page 15 (Overheat Protection). Remove the spa cover and let the water temperature cool down to 104F. Reset as shown above "Resetting Your Spa". If your spa reaches 112F again, contact your dealer for service.
	b. HILI message appears if the high-limit sensor detects 118F at the spa heater. DO NOT ENTER THE WATER.	Turn off all power to the spa and contact your dealer for service.

ICE	Water in plumbing below 50 F Call for service if spa fails to come on.	No action required. Pump will come on to circulate water and then heater. Heater will stay on until water reaches 60 F or set temperature.
-----	---	--

LS=0 or LS=S	Water temperature sensor	Reset spa. If message comes back, call for service.
--------------	--------------------------	---

SS=0 or SS=S	High Limit sensor	Reset spa. If message comes back, call for service.
--------------	-------------------	---

PB	Break in communication.	Reset spa. If message comes back, call for service.
----	-------------------------	---

LIMITED REPLACEMENT WARRANTY

U100 SERIES

Vita International extends this limited warranty solely to the original Purchaser of any self-contained **U100 Spa Series** installed within the United States or Canada.

SPA SHELL: Vita International warrants its shells against loss of water due to defects in materials and workmanship for five (5) years from the original date of purchase.

The acrylic surface is warranted against blistering, cracking and chipping resulting from a defect in the acrylic surface material for a period of two (2) years from the original date of purchase.

COMPONENT WARRANTY

Vita International warrants all factory installed electrical components— pumps, blowers, and control system — and plumbing components — jets, controllers— to be free from defects in materials and workmanship for a period of one (1) year from the original date of purchase. The plumbing infrastructure, such as glued joints, pipes and hoses are also warranted to be free from defects in material and workmanship for a period of one (1) year.

Wearable components such as filter cartridges, light bulbs, fuses and headrests are not covered under this warranty but are warranted to be free from defects in material and workmanship at the time of the original delivery.

Covers, as supplied by Vita International, are warranted to be free from manufacturing defects for a period of (1) year.

Dealer added options are excluded from this warranty.

WARRANTY PERFORMANCE

In the event of a defect covered by this warranty, notify your local spa dealer within 10 days of the time the defect is discovered. Upon proof of purchase by dated purchase receipt, Vita International or its authorized representative will correct the defect within the terms and conditions contained in this warranty. There will be no charge for in-home service labor during the first year. You may be assessed reasonable repairperson travel charges. Vita International, at its sole option, may elect to substitute a spa or component of equal value, either new or reconditioned, to correct a defect. Such replacement shall assume, as its warranty, the remaining portion of the warranty on the original product. If the entire spa needs to be substituted because the repair is not feasible or the

repair can not be performed in the field, reasonable costs to pick up the defective spa and return it or delivering and installing the replacement spa will be the responsibility of the spa owner.

EXCLUSIONS

This warranty is void if Vita International or its representative determines that the spa has been subjected to any alterations or repairs by anyone other than an authorized representative of Vita International. This warranty shall also be voided if there is evidence that the spa has been subjected to misuses, abuses, negligence, improper installation or operations other than in accordance with the instructions in the owner's manual. The spa must be installed by licensed professionals in conformity with state and local codes. Vita International is not responsible for spikes, damage caused by Acts of God or conditions beyond our control.

See warranty card for complete list of exclusions.

DISCLAIMER

Except as expressly provided, there shall be no other warranty or obligation, expressed or implied, oral or statutory. No dealer or other person has the authority to make any warranties or representations covering Vita International or its products. Vita International and its representatives shall not be liable for any injury, loss, cost or other damage, including but not limited to, loss of use, inconvenience, costs of removal of spa or fixtures or any other incidental or consequential costs, expenses or damages. Under no circumstances shall Vita International or any of its representatives be held liable for injury to any person or damage to any property, however arising. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights. You may also have other rights, which vary, from state to state.

CUSTOMER SERVICE

Contact your dealer or local authorized repair center for service. If you do not know who your local dealer is, contact Vita International's Technical Service Division at (305) 685-2063.

This warranty is effective for spas manufactured after January 1, 2000.

Vita International Ltd.'s Service Center

Toll Free at: (305) 685-2063

MAINTENANCE LOG

Use this section to keep a record of when you perform any maintenance on your spa.

This image shows a single page of white paper with horizontal blue ruling lines. The lines are evenly spaced and run across the width of the page. There are approximately 20 lines visible. The paper appears to be from a notebook or a standard sheet of stationery. There is no handwriting or other markings on the page.

**VITA INTERNATIONAL
DIVISION OF
DM INDUSTRIES LTD.**



MIAMI FLORIDA

Vita International, Ltd., 2320 Northwest 147th Street, Miami, Florida 33054
Phone: (305) 685-2063 or (305) 908-8187 • Toll Free: (877) 240-945 • FAX: (305) 685-9794
www.vitaspa.com

SPACIRQ-01-1212b



© 2001 DM INDUSTRIES • ALL RIGHTS RESERVED